



Snooze
sleep well

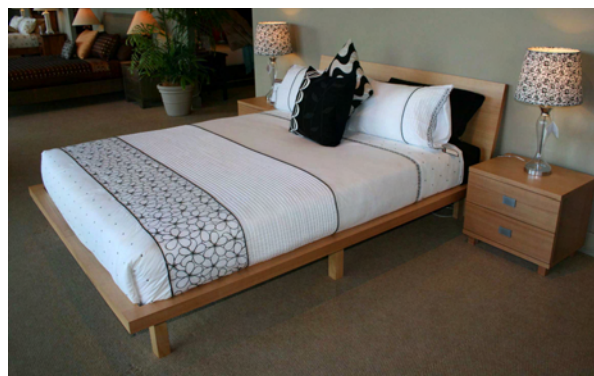


Assembly Instructions

1) Refer to Bolt Pack List, Bed Parts and Bolt Hole Diagram for all part descriptions.


2) Remove "knock off blocks" from bases and lay on the floor. Attach support rail, without legs, to the head end. Use 4 x 35mm bolts, refer to Bolt hole diagram and use holes marked [c]

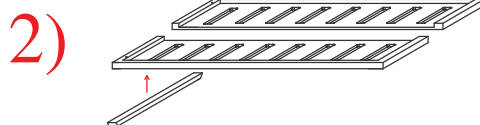


3) Now, attach head using 4 x 75mm bolts into holes [d] and [e]

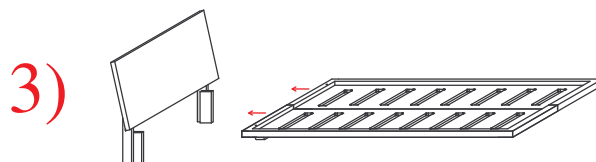

4) Attach the 4 legs to two of the support rails as illustrated.

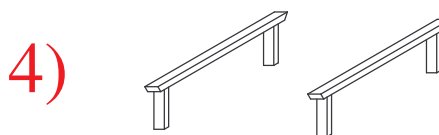

5) Finally, attach support rails with legs to base. Use 8 x 35mm bolts and refer to Bolt hole diagram for holes [a] and [b]

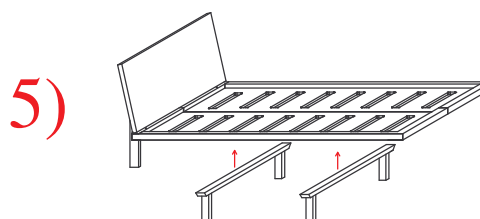

Snooze
sleep well



Underbed Drawer Option

* All Maxi Beds come with the option of fitting under bed drawers.
(King, Queen & Double can have up to four drawers)

* The drawers can face any direction and can be ordered after purchase of a normal bed.


Assembly Instructions

1) Referring to below options.

Decide which way to face the drawers.

2) Stand boxes up as illustrated. 

Attach drawer feet using 8 x 35mm bolts.
This will hold the two boxes together.

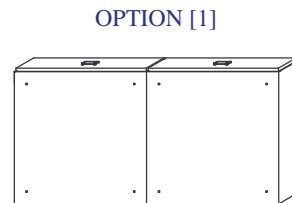


4) Attach drawers to bed base using 8 x 35mm bolts
Refer to Bolt hole diagram for correct holes

OR

5) Attach support with legs using 4 x 35mm bolts
Support rail placement depends on where drawers
have been installed. Refer to options for guidance.

OPTION [2] & [3]

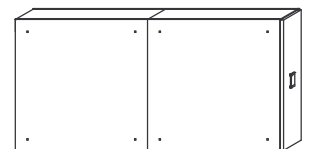

Also, step 5 is not always necessary.


For example:

a/ Double Bed with option [2]


b/ Four underbed drawers

If in doubt, install support or contact store

OPTION [1]

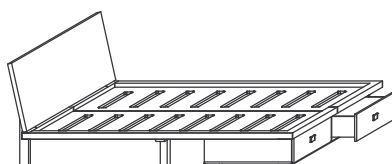

OPTION [2]

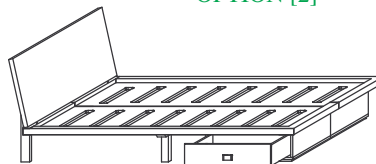

OPTION [3]

